

ErgoDrive

ScanBox

Bringing your food with care


Quickstart Guide

Congratulations on your selection of a ScanBox ErgoDrive system! ErgoDrive is designed to make everyday life more ergonomic and safe. We are pleased that you have chosen one of our products and hope you will enjoy your equipment for years to come.


Follow these simple steps to get started.



Start: Hold the "ON/OFF" button to start the device. The Panel will beep to indicate that it is turned on.

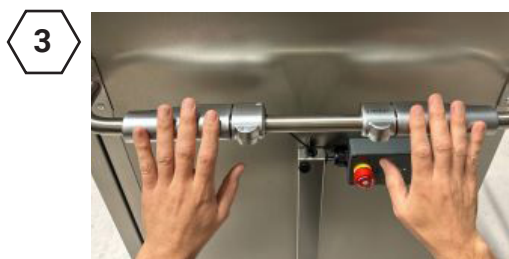

Forward motion: Grab the handles and gently push forward to move the trolley.

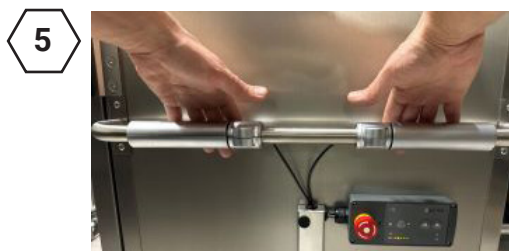

Reverse: Grab the handles and gently pull towards your body to reverse the trolley.



Emergency braking: Tap the red button to immobilize the unit in case of emergency.

Release emergency brake: Turn the red button to the right until it clicks, then press the "ON/OFF" button one time.

2 Calibration: Ensure your hands do not touch the handles during startup to allow the system to calibrate. Once the calibration is complete, you will hear a second beep, indicating the system is ready to use.

If the handles are touched during startup, a continuous beep will sound. Release the handles and allow the system to recalibrate. A single beep will indicate when it is ready.

4 Speed Control: The harder you press, the faster the device goes. The system is limited to 6 km/h. pressing harder will not increase the speed beyond this limit.

LED Indicator: Some versions have an LED indicator light around the "ON/OFF" button. This light will turn red if the handles are pressed too hard.

6 Stop: The system will brake immediately once you let go of the handles.

To park the trolley or secure it during transportation, Activate the central brake with your foot under the chassis. Turn the unit off by pressing the "ON/OFF" button.

8 Charging the battery: The battery for the electric motor is integrated into the unit's electrical system and requires no cables to function.

Charging will start automatically once the trolley is connected to a power outlet. Requiring no additional effort to keep the unit operational.

You cannot drive the unit while it is connected to a power outlet.

Having problems?

.....
Contact your local service partner or "spareparts@scanbox.se".
The unit's serial number may be required. You can find it on the side of the box.

